


SYMBOL

FR

NOT TO SCALE

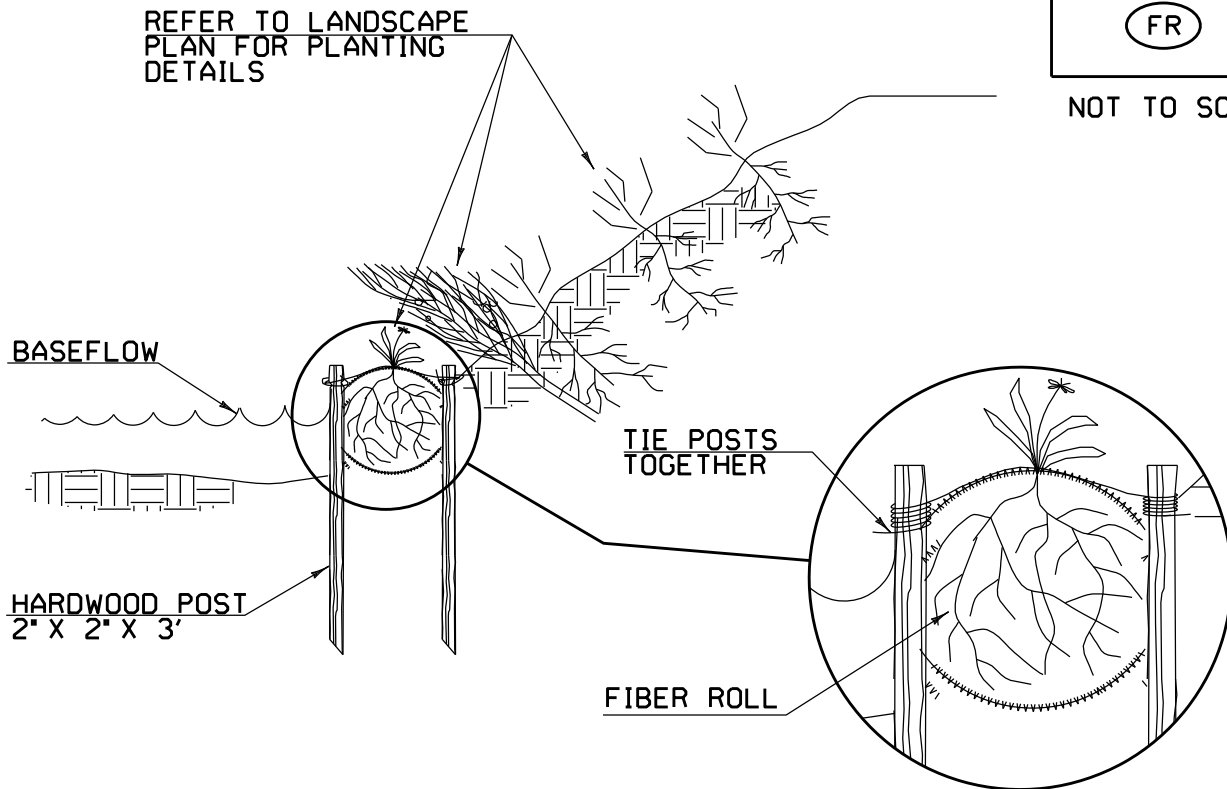

CONSTRUCTION SPECIFICATIONS

1. EXCAVATE A 2' TO 3' TRENCH SLIGHTLY BELOW BASEFLOW. BASEFLOW ELEVATION SHALL BE PROVIDED ON THE PLANS.
2. PLACE THE ROLL IN THE TRENCH AND ANCHOR WITH 2'X2' POSTS PLACED ON BOTH SIDES OF THE ROLL AND SPACED LATERALLY ON 2' TO 4' CENTERS. TRIM THE TOP OF THE POSTS EVEN WITH THE EDGE OF THE ROLL, IF NECESSARY.
3. NOTCH THE POSTS AND TIE TOGETHER, ACROSS THE ROLL, WITH WIRE OR ROPE. ALL NON-BIODEGRADABLE COMPONENTS SHALL BE REMOVED ONCE FINAL VEGETATION IS ESTABLISHED.
4. PLACE SOIL EXCAVATED FROM THE TRENCH UP SLOPE OF THE ROLL AND HAND TAMP. PLANT SUITABLE HERBACEOUS OR WOODY VEGETATION AS SPECIFIED IN THE IN THE LANDSCAPE PLAN. IF SPECIFIED, VEGETATION SHALL BE PLACED IMMEDIATELY ADJACENT TO, OR DIRECTLY IN, THE ROLL TO PROMOTE ROOT GROWTH INTO THE FIBER.

ADAPTED FROM DETAILS PROVIDED BY: NEW YORK STATE
DEC, ORIGINALLY DEVELOPED BY USDA-NRCS
VERMONT DEPARTMENT OF ENVIRONMENTAL CONSERVATION

FIBER ROLL

NOTES:

REFER TO LATEST EDITION OF "THE VERMONT STANDARDS & SPECIFICATIONS FOR EROSION PREVENTION & SEDIMENT CONTROL" FROM THE VT AGENCY OF NATURAL RESOURCES FOR ADDITIONAL GUIDANCE.

THIS WORK SHALL BE PERFORMED IN ACCORDANCE WITH SECTIONS 651, 653, AND 656.

REVISIONS

MARCH 21, 2008	WHF
JANUARY 13, 2009	WHF
NOVEMBER 25, 2024	CMMJ